

Playing DVD's and CD's

Playing DVD's and CD's using the Mediasonic DVD player

Figure 1 shows the **Mediasonic DVD Player**. It is located below the switches for the wireless microphones.

When the Mediasonic DVD player is turned on it will appear as a video device on the Blackmagic ATEM multiview display.

WARNING: Always use the **OPEN/CLOSE** switch on the Mediasonic player. Forcing the player tray to close by pressing on the tray is likely to damage the mechanism and destroy the player.



Figure 1: The Mediasonic player.

Figure 2 shows the **Mediasonic DVD Player** on the **ATEM** Multiview display.

- ✓ Select button #3 to move the Mediasonic to the **Preview** window.
- ✓ Insert a DVD or CD into the Mediasonic player.

The Mediasonic player menu should appear on the **Preview** window of the **Blackmagic ATEM**.

- ✓ Use the Mediasonic **remote control** to select desired options.
- ✓ Press **play-Pause** on the Mediasonic remote control, and as soon as the desired location is on the display. Press **play-Pause** again on the Mediasonic remote control to **pause** playback.



Figure 2: The Mediasonic on the ATEM.

- ✓ **Play** the selection and adjust the sound volume using the appropriate input on the Sound Board.
- ✓ Return the player to the desired starting location.
- ✓ Press the **Cut** (or **Auto**) button on the **Blackmagic ATEM** to send the Mediasonic to the **Program** window on the ATEM.
- ✓ Press **play-Pause** to play the selection.

This moves the Mediasonic **Preview** display to **Program** on the Multiview display.

If a CD is being played, it is not necessary to send the Mediasonic picture to the ATEM Program.

(NOTE: The Blackmagic ATEM Program output is sent to both the **Projector** and to Channel 6 of the V800 video mixer.)



NOTES
