



Yamaha tf5 Quick Start



Start Yamaha tf5

- ✓ Turn on Power.
- ✓ Wait for all lights top stop flashing.

NOTE: The tf5 remembers settings from the last time it was used. Each time it is started it must be reset to the default settings by pressing the B button.

- ✓ Press **User Defined Keys B**.
- ✓ At the *Recall Scene A02* message, select **OK**.



Set mic gain

- ✓ Select a mic input.

When an input is selected it will be highlighted on the display.

- ✓ Tap twice the bottom of the selected mic on the display.

This opens the CH view display.



- ✓ Tap right below HA for *Gain* display.





- ✓ Use the **One Touch Knob** to adjust the Gain.
- ✓ Repeat this process to set the Gain for each mic in use.

NOTE: Once the Gain display is on the screen it will remain active for each selected input.

- ✓ After all mic gains have been set, use the main control board surface to turn inputs (mics) ON and OFF as needed.

NOTE: The only time the **Aux** settings need to be changed is when a particular input (mic) needs to be removed or added to a speaker (or output). For example removing a mic from the ceiling speakers.



Removing a mic from the Ceiling speakers.



There are times when a mic should not be sent to the ceiling speakers. For example, when a piano is being used for vespers.

- ✓ Select **AUX 1** (AUX 1 controls which inputs are sent to the ceiling speakers).
- ✓ Toggle **OFF** the input to be removed from the ceiling speakers.

- ✓ Select **AUX 1** to deselect the ceiling speaker input controls.

Aux	
1	Ceiling Speakers
2	Village BVTV
3	Front Wall Speakers
4	Stage Speakers
5	Booth Speaker
6	
7	OBS Tower recorder
8	OBS Laptop recorder
Aux Outputs	